

## CAPSOL-LFP-51.2V-230AH-11.77KWh

- Safety in use
- Low self-discharge rate
- Wide temperature performance
- Long service life
- EVE cells with traceable QR code
- BMS with RS485 and CAN communications capabilities
- RS323 interface with computer for advance monitoring
- High energy density and conversion efficiency
- Environmentally Friendly
- Easy installation, easy maintenance, easy replacement for lead-acid battery



Item	Specification
Model	CAPSOL-LFP-51.2-230
Rated Capacity	230Ah
Nominal Voltage	51.2V
Max Charge Voltage	57.6V
Discharge Cut Off Voltage	44.0V
Charge Current-up to	60.0A
Max. Continuous Discharging Current	70.0A (Recommended max. 46.00A)
Cell	3.2V 230Ah LiFePO4 EVE Cell
Weight	Up to 82kg (Cells weight up to 67Kg)
Terminal	Screw Terminal
BMS Protection	Over-Charge, Over-Discharge, Over-Current, Short Circuit, Over-Temperature, and Communication
Dimension (mm)	590*400*250mm
Outer Package Material	Iron Case
Operating Temperature	Charging: 0~55°C Discharging: -20~60°C Storage: -10~45°C
Cycles (at 25°C)	>3500 cycles @80% D.o.D. >6000 cycles @65% D.o.D.
Recommended SOC Window	10%~90%
Cells Standards Compliance	Products meet GB, UN, ROHS Certification Requirements
BMS	RS485 & CAN Capability
Design Lifespan	8~10 years
Warranty	2 Years, enable to prolong


## EVE Cells General Details

No.	Item	Parameter	Remark	
1	Typical Capacity	230Ah	(25±2)°C, Standard charge and discharge	
2	Typical Voltage	3.2V		
3	AC Impedance Resistance	≤0.30mΩ		
4	Standard charge and discharge	Charge/Discharge Current	0.5C/0.5C	(25±2)°C
		Charge/Discharge Cut-off Voltage	3.65V/2.5V	
5	Max Charge/Discharge Current	Continuous Charge/Discharge Current	1C/1C	Reference Continuous/Pulse Charge/Discharge Current Map
		Pulse Charge/Discharge Current (30s)	2C/2C	
6	Recommended SOC window	10%~90%	N.A.	
7	Charging Working Temperature	0°C~60°C	Reference Continuous/Pulse Charge/Discharge Current Map	
8	Discharging Working Temperature	-30°C~60°C		
9	Storage Temperature	Short-Term (Within a Month)	-20°C~45°C	N.A.
		Long Term (Within a Year)	0°C~35°C	
10	Storage Humidity	<95%		
11	Monthly Self-discharge Rate	≤3%/M		(25±2)°C, Storage SOC 30%~50%SOC


\* Specifications subject to change without notice.

# BATTERY CELL PERFORMANCE GRAPH


1、C-Rate Discharge Performance at 25°C

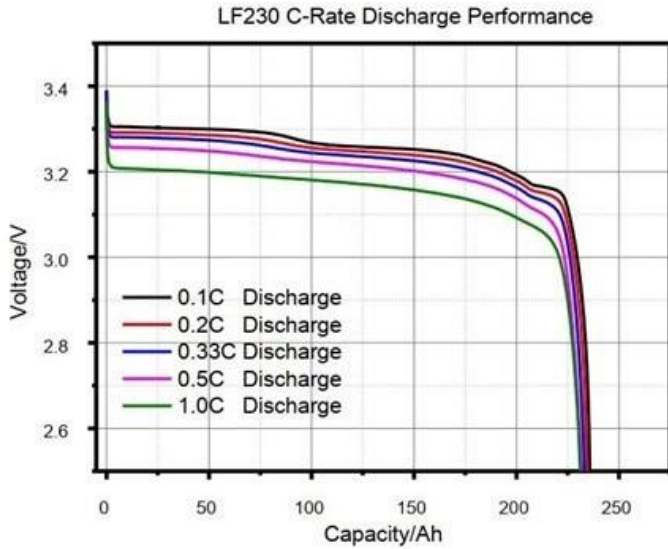

2、Cycle curve(1C/1C 3.65V-2.5V)

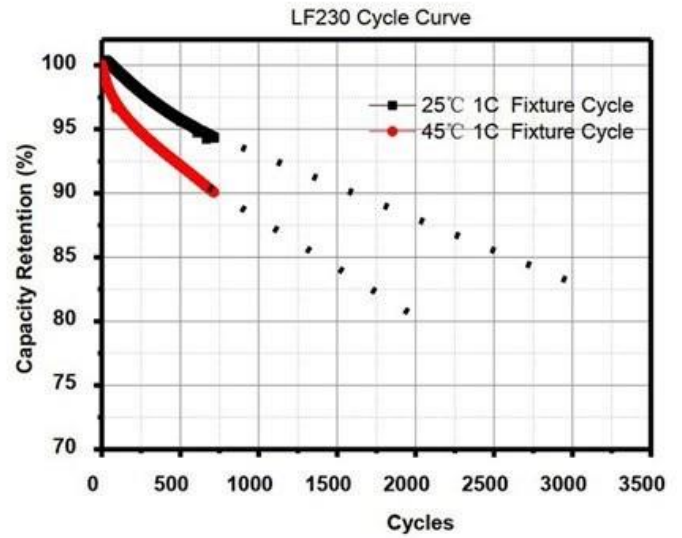

**Discharge curves at different temperature**

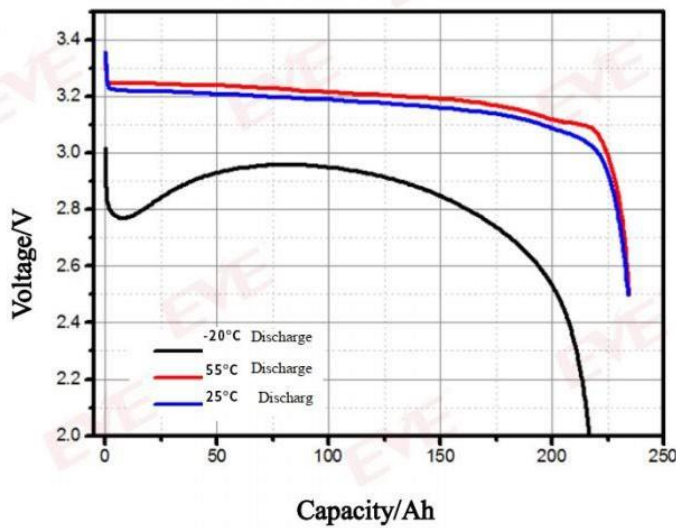

(Note: the above data are from EVE's laboratory)

## PRECAUTIONS

- a. When charging and discharging the battery, ensure that the battery voltage, current and temperature are monitored and protected.
- b. Keep the battery away from heat sources, fire sources, and other corrosive environments such as heat and strong acids and alkalis.
- c. Keep the battery in a dry and ventilated location to avoid moisture which can lead to damage to cells and BMS
- d. Do not short the battery or install it with incorrect polarity at any time
- e. Do not mix batteries of different models or different manufacturers.
- f. Do not use external force to drop, impact or puncture the battery
- g. Do not disassemble the battery or change the external structure
- h. When the battery is not used for a long time, please keep the battery charge at 30% ~ 50% SOC, and avoid direct sunlight or high temperature and high humidity environment.
- i. When operating the battery, you need to wear protective equipment such as rubber gloves
- j. If the battery leaks, smokes or is damaged, please stop using it immediately and contact us.



**SEPLUS SMART 16S 200A  
BATTERY (LFP) MANAGEMENT SYSTEM  
USER MANUAL**

Dongguan Seplos Technology Co., Ltd

## CONTENT

1. Application .....	4
2. Features.....	4
2.1 Cell and pack voltage detection .....	4
2.2 Cell/ambient/MOSFET temperature detection.....	4
2.3 Charging/discharging current detection .....	5
2.4 Short circuit protection .....	5
2.5 Pack capacity and cycle life calculation.....	5
2.6 Charging/discharging MOSFET .....	5
2.7 Cell balancer .....	6
2.8 LED indicator .....	6
2.9 Standby mode .....	6
2.10 Power on/off with master pack .....	6
2.11 CAN/RM485/RS485 interface.....	7
2.12 Parallel communication.....	7
2.13 Battery information storage.....	7
2.14 Battery parameter configuration .....	8
2.15 Battery function configuration.....	8
2.16 Precharge .....	8
2.17 Dry contact .....	8
2.18 Aerosol supportable.....	9
2.19 Bluetooth.....	9
2.20 Compensation .....	9
2.21 Charging current limiting.....	10
2.22 Automatically identification.....	11
2.23 BatteryMonitor software .....	11
2.24 Firmware updating .....	11
3. Diagram .....	12
4. Electrical features.....	12
5. Basic parameters.....	12
5.1 Parameter setting.....	12
5.1.1 Individual cell over voltage parameters.....	12
5.1.2 Individual cell low voltage parameters .....	13
5.1.3 Pack over voltage parameters.....	13
5.1.4 Pack low voltage parameters .....	14
5.1.5 Cell high/low temperature (charging) parameters .....	14
5.1.6 Cell high/low temperature (discharging) parameters.....	15
5.1.7 Ambient high/low temperature parameters .....	15
5.1.8 MOSFET high/low temperature parameters.....	16
5.1.9 Charging current limiting parameters.....	16
5.1.10 Charging over current parameters.....	17
5.1.11 Discharging over current parameters .....	17
5.1.12 Transient over current parameters.....	18
5.1.13 Short circuit parameters .....	18

---

5.1.14 Cell balance parameters.....	19
5.1.15 Cell balance parameters.....	19
5.1.15 Other parameters.....	20
5.2 Working mode.....	21
5.2.1 Charging mode .....	21
5.2.2 Discharging mode.....	21
5.2.3 Standby mode .....	21
5.2.4 Power off mode.....	21
5.3 LED indicator .....	22
5.3.1 LED lights .....	22
5.3.2 Capacity indicators .....	22
5.3.3 Lights blinking explanation A .....	22
5.3.4 Running status indicators.....	23
6. Function introduction.....	23
6.1 Standby.....	23
6.2 over charging protection and recovery.....	24
6.2.1 Cell over charging protection and recovery.....	24
6.2.2 Pack over charging protection and recovery .....	24
6.3 over discharging protection and recovery .....	24
6.3.1 Cell over discharging protection and recovery .....	24
6.3.2 Pack over discharging protection and recovery.....	25
6.4 Charging over current protection and recovery .....	25
6.5 Discharging over current protection and recovery .....	25
6.6 Temperature protection and recovery .....	26
6.6.1 High temperature protection and recovery.....	26
6.6.2 Low temperature protection and recovery.....	26
6.6.3 Ambient and MOSFET temperature protection.....	26
6.7 Cell balance .....	27
6.8 Power on/off .....	27
6.9 Storage .....	27
7. Size and dimension.....	28
8. Appearance .....	28
8.1 Wire introduction.....	29
8.2 Wiring.....	30
9. Communication introduction.....	30
9.1 CAN and RM485 .....	30
9.2 RS485 .....	31
9.3 Parallel.....	32
9.4 DIP switch .....	32
9.5 Auto-identification .....	32
10. LCD screen .....	33
11. Safety precautions.....	34

## 1. Application

This is the full-featured Battery Management System (BMS) that designed to monitor 16s LFP battery pack at 200A rate. The BMS offers protection and recovery to individual cell over/under voltage, pack over/under voltage, charge/discharge over current, high/low temperature and short circuit. And accurately calculates the SOC and SOH status. As well as keeps voltage balancing during charging and discharging. And could also monitors parameter settings and data through computer via RS485 interface. (Baud rate 19200. )

## 2. Features

### 2.1 Cell and pack voltage detection

By detecting the cell voltage in real-time, BMS provides over/under voltage warnings and protections. At the temperature of 0 ~ 45°C, the measured voltage difference is about  $\pm 10\text{mV}$ . While at the temperature of -20 ~ 0°C and 45 ~ 70°C, the measured voltage difference is  $\pm 30\text{mV}$ . The warning and protection threshold value can be configurable through software.

### 2.2 Cell/ambient/MOSFET temperature detection

By detecting the temperature of cells (4 of the 16 cells), ambient temperature, and temperature of PCB board in real-time via NTC, BMS provides high/low temperature warnings and protections. The measured difference is  $\pm 2^\circ\text{C}$ .

Cell temperature sensor NTC value is  $10\text{K}\Omega$ , and B-value at 3435.

The warning and protection threshold value can be configurable through software.



### **2.3 Charging/discharging current detection**

With the current sense resistors in the charging/discharging circuit, BMS detects and monitors the the input and output current in real-time, and provides over current warnings and protections. When the temperature rise is less than 40°C, the measured accuracy is up to  $\pm 1\%$ .

The warning and protection current threshold can be configurable through software.

### **2.4 Short circuit protection**

BMS features short-circuit detecting and protecting function.

### **2.5 Pack capacity and cycle life calculation**

BMS calculates the remaining capacity in real-time. The BMS get the capacity at the first time when the battery pack complete a full charging and discharging cycle. And the SOC calculating accuracy is  $\pm 5\%$ .

BMS counts the number of how many charging/discharging cycles a battery has experienced as aging. When the accumulated discharge capacity is equal to 80% of the design capacity. The cycle count increases. The capacity parameters can be configurable through software.

### **2.6 Charging/discharging MOSFET**

Low impedance, high current MOSFET is the optimized design for the power-on, zero handoff and charging voltage withstanding for large capacitive loads backup power supply.

When in charging or standby status, each cell can be equalized. Which will greatly increases battery life span and cycle life. The voltage and

voltage difference threshold value can be configurable through software.

## 2.7 LED indicator

There are 6 LED indicators. 4 white LED indicators for SOC status. 1 red LED indicator for warning, protection, and fault indicating. And 1 white LED for battery standby, charging and discharging status.

## 2.8 Standby mode

BMS features auto sleeping function.

Automatically standby:

- If the battery didn't charge/discharge for 48 hours. The BMS will enter standby mode automatically.
- If the battery is in discharge protection status, and maintains communication for 1 minutes. The BMS will sleeping automatically.

Manually standby:

- Hold the 'reset' button for 6 seconds. The indicators lighten in order. And the BMS enters into sleeping.
- To disconnect the external switch, the battery pack will entering standby mode.

Sleeping mode function is configurable through software.

## 2.9 Power on/off with master pack

Paralleled battery packs could be powered on with one-click. When the battery packs are connected in parallel, BMS needs to setup address via DIP switch. If the DIP address is correctly set, power on/off the master pack, all the slave packs can be powered on/off together. (If each pack with different voltage, and there's current output between the paralleled packs, slave packs cannot be powered off.)

## 2.10 CAN/RM485/RS485 interface

CAN BUS could realize communication between battery and inverter. And CAN communication has different protocol according to different inverters. (Seplos Default CAN protocol is compatible with Pylontech, Goodwe, DEYE, TBB, protocol. To switch protocols through software, there are optional Growatt, Victron, SMA, Sofar, Solis, and Studer protocols.)

RS485 communication could realize communication between battery and inverter. And CAN communication has different protocol according to different inverters. (RS485 could recognize the Pylontech, Growatt, and SRNE protocol )

RS485 communication could realize data monitoring, operation controlling and parameter setting through computer or other devices via telemetering, telesignalization, remote regulating and remote control commands.

## 2.11 Parallel communication

Connect the battery packs through RS485. And setup address with 8 DIP switches.

Two ways to check the paralleled packs information:

- Connected the paralleled packs with RS485 interface. Then contented with master computer.
- Connected the paralleled packs with RS485 interface. Then connect the master pack with inverter via CAN/RM485 interface.

## 2.12 Battery information storage

Each time the battery system changes status, BMS will save the data information, which including warning, protection triggering and

releasing data. BMS can also save the data information of a certain period of time by setting start time, end time and time interval. Up to 300 historical data can be recorded and stored. And all the data can be read, and save as excel through master computer.

### **2.13 Battery parameter configuration**

Voltage of individual cell, total voltage, charging and discharging over current, high or low temperature of cell and ambient, cell balancing and equalization, the numbers of cells in series, battery capacity and other battery management parameters can all be configurable through software.

### **2.14 Battery function configuration**

Manage voltage, temperature, and current related monitoring and controlling functions, as well as capacity calculating function through software.

### **2.15 Precharge**

The pre-charge function will be activated at the moment when BMS or discharge MOSFET powered on. The pre-charge time range is 1mS - 5000mS. This function will effectively protect BMS from short circuit. And it is specially designed for the application of capacitive load.

### **2.16 Dry contact**

BMS features two circuit of dry contact output for,

- SOC warning and protection, low voltage warning and protection, temperature abnormal warning and protection, over charging/discharging warning and protection, over voltage warning and protection.

- Temperature sensor failure warning, cell voltage difference failure, transience over current protection, short circuit protection, and cell over voltage protection + 30mV.

### **2.17 Aerosol supportable**

BMS supports abnormal information transmit via aerosol dry contact and remind customer about the abnormal status.

### **2.18 Bluetooth**

We can monitor and configure the functions, parameters, and warning information through Bluetooth APP.

- Battery information
- The communication between BMS and inverter
- Warning status, parameters, and function switch configuration
- Paralleling information
- English version available

### **2.19 Compensation**

Long copper bus bars, or wires would cause large voltage difference. If the voltage difference is too large, check the connectors between the two cells. The voltage difference caused by long bus bars and wires could set voltage compensation through upper computer system.

Check the voltage difference between the long bus bars, or wires when discharging, and calculate the resistance compensation according to  $\text{resistance} = \text{voltage difference} / \text{current}$ . And set the resistance value with upper computer system. The default resistance compensation is between the anode of 9th battery and cathode of 13th battery. Another two resistance compensation reserved for special occasions.

Note: Please confirm with SEPLOS before setting the resistance

compensation value to ensure the consistency of cells.

## 2.20 Charging current limiting


There are two kinds of current limitation to meet different needs. That is active current limitation and passive current limitation.

- Active current limitation:

When at the charging status, the current limitation MOSFET keeps being connected. And the charging current will be limited to 10A.

- Passive current limitation:

When at the charging status, the charging MOSFET keeps being connected. Once the charging current reaches over current warning threshold (The default threshold value is 100A.), the charging current limitation will be activate. And the charging current will decrease to 10A. BMS will detect the charging current every 5 minutes, and check whether the charging current could activate passive current limitation. (The default passive current limitation threshold is edible. )

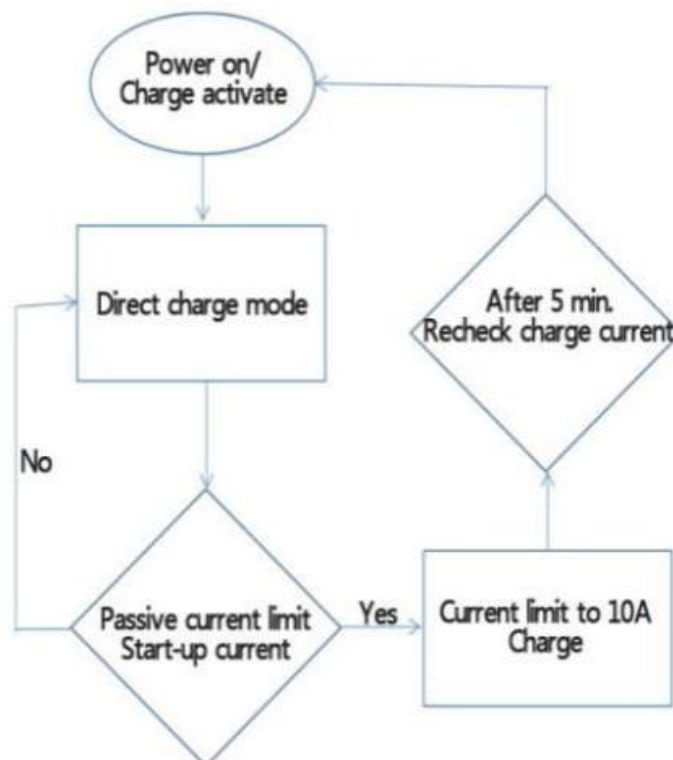

## 2.21 Automatically identification

If the automatically identification functions switched on, each paralleled battery pack can distribute identifications according to wiring connections. No need to dial DIP switches.

## 2.22 BatteryMonitor software

Software name is BatteryMonitor. It is available in Chinese and English version. (Load the corresponding language agreement.) Check the installation guide for installation.


Download the software with this link:

<https://drive.google.com/drive/folders/10pxgNLHovcDZRVGrCZsSkfecBrRw-AdW?usp=sharing>

## 2.23 Firmware updating

Upgrade the firmware via RS485 interface.

## 3. Diagram

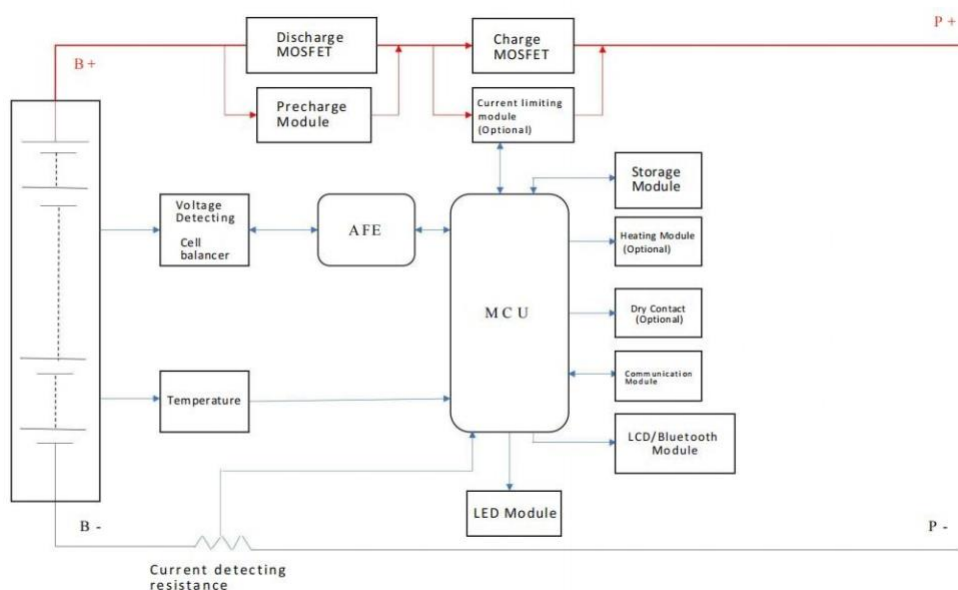

## 4. Electrical features

Item	Min.	Max.	Type
Standard working voltage	40V	59V	48V
Standard charging voltage	30V	60V	54V
Working temperature range	-20°C	70°C	25°C
Storage temperature range	-40°C	85°C	25°C
Working humidity	10%	85%	/
Continuously charging current	/	110°C	100°C
Continuously discharging current	/	110°C	100°C
Discharge output impedance	<2mΩ		
Power consumption	<40mA		
Sleeping mode power consumption		50uA	0uA

## 5. Basic parameters

### 5.1 Parameter setting

#### 5.1.1 Individual cell over voltage parameters

Individual cell over voltage parameter				
Functions	Status	Item	Default	Configurable Range
Over voltage warning	ON	Over voltage warning	3500mV	Over voltage warning recovery - over voltage protection
		Over voltage warning recovery	3400mV	3000mV - over voltage warning
		Under voltage warning	2900mV	Under voltage protection - under voltage warning recovery
		Under voltage warning recovery	3100mV	Under voltage warning - 3300mV
over voltage protection	ON	Over voltage protection	3650mV	Over voltage warning - 4500mV
		Over voltage protection recovery	3400mV	Over voltage warning recovery - over voltage protection
		Over voltage recovery condition	1. Individual cell voltage decrease to over voltage recovery threshold. 2. The remaining capacity lower than 96% of the intermittent power supply. <b>Both conditions should be satisfied.</b>	
			Output current $\geq 1A$	



### 5.1.2 Individual cell low voltage parameters

Individual cell low voltage parameter				
Functions	Status	Item	Default	Configurable Range
under voltage protection	ON	Under voltage protection	2700mV	1500mV - under voltage protection recovery
		Under voltage protection recovery	2900mV	Under voltage protection - under voltage warning
		Under voltage protection condition	When an individual cell gets under voltage protection threshold, BMS maintain communication with inverter for 1 minutes and powered off.	
		Under voltage protection recovery	Input current $\geq 1A$	

### 5.1.3 Pack over voltage parameters

Pack over voltage parameter				
Functions	Status	Item	Default	Configurable Range
Over voltage warning	ON	Over voltage warning	56.0V	Over voltage warning recovery - over voltage protection
		Over voltage warning recovery	54.0V	53.0V - over voltage warning
		Under voltage warning	46.4V	Under voltage protection - under voltage warning recovery
		Under voltage warning recovery	48.0V	Under voltage warning - 55.0V
Over voltage protection	ON	Over voltage protection	57.6V	Over voltage warning - 60.0V
		Over voltage protection recovery	54.0V	Over voltage warning recovery - over voltage protection
		Over voltage protection recovery conditions	1. Individual cell voltage decrease to over voltage recovery threshold. 2. The remaining capacity is lower than 96% of the intermittent power supply. Both <b>conditions should be satisfied.</b>	
			Output current $\geq 1A$	

### 5.1.4 Pack low voltage parameters

Pack low voltage parameter				
Functions	Status	Item	Default	Configurable Range
Under voltage protection	ON	Under voltage protection	41.6V	36.0V - under voltage warning recovery
		Under voltage protection recovery	46.0V	Under voltage protection - under voltage warning
		Under voltage protection condition	When the total voltage gets under voltage protection threshold, BMS maintain communication with inverter for 1 minutes and powered off.	
		Under voltage protection recovery conditions	Input current $\geq 1A$	

### 5.1.5 Cell high/low temperature (charging) parameters

Cell high/low temperature (charging) parameters				
Functions	Status	Item	Default	Configurable Range
Cell temperature (Charging)	ON	High temperature warning	50°C	High temperature warning recovery - high temperature protection
		High temperature warning recovery	47°C	35°C - high temperature warning
		High temperature protection (charging)	55°C	High temperature protection recovery - 80°C
		High temperature protection recovery	50°C	High temperature warning recovery - high temperature protection
		Low temperature warning	2°C	Low temperature protection - low temperature warning recovery
		Low temperature warning recovery (charging)	5°C	Low temperature warning - 10°C
		Low temperature protection	-10°C	-20°C - low temperature protection recovery
		Low temperature protection recovery	0°C	Low temperature protection - low temperature warning recovery

### 5.1.6 Cell high/low temperature (discharging) parameters

Cell high/low temperature (discharging) parameters				
Functions	Status	Item	Default	Configurable Range
Cell temperature (Discharging)	ON	High temperature warning	52°C	High temperature warning recovery - high temperature protection
		High temperature warning recovery	47°C	High temperature protection recovery - 80°C
		High temperature protection	55°C	High temperature warning recovery - high temperature protection
		High temperature protection recovery	50°C	High temperature warning recovery - high temperature protection
		Low temperature warning	-10°C	Low temperature protection - low temperature warning recovery
		Low temperature warning recovery	3°C	Low temperature warning - 10°C
		Low temperature protection	-15°C	-30°C - low temperature protection recovery

### 5.1.7 Ambient high/low temperature parameters

Ambient high/low temperature parameters				
Functions	Status	Item	Default	Configurable Range
Ambient temperature	ON	High temperature warning	50°C	High temperature warning recovery - high temperature protection
		High temperature warning recovery	47°C	-20°C - high temperature warning recovery
		High temperature protection	60°C	High temperature protection recovery -80°C
		High temperature protection recovery	55°C	High temperature warning recovery - high temperature protection
		Low temperature warning	0°C	Low temperature protection - low temperature warning recovery
		Low temperature warning recovery	3°C	Low temperature warning - 60°C
		Low temperature protection	-10°C	-30°C - low temperature protection recovery
		Low temperature protection recovery	0°C	Low temperature protection - low temperature warning recovery

## 5.1.8 MOSFET high/low temperature parameters

MOSFET high/low temperature parameters				
Functions	Status	Item	Default	Configurable Range
MOSFET temperature	ON	High temperature warning	90°C	High temperature warning recovery - high temperature protection
		High temperature warning recovery	85°C	60°C - high temperature warning
		High temperature protection	100°C	High temperature warning - 120°C
		High temperature protection recovery	85°C	High temperature warning recovery - high temperature protection

## 5.1.9 Charging current limiting parameters

Charging current limiting parameters				
Functions	Status	Item	Default	Configurable Range
Current limiting (charging)	OFF	Active current limiting	10A	When the charger current > 10A, current limiting activated.
	ON	Passive current limiting		When the charger current > charging over current warning (configurable), current limiting activated.
		Charging current limiting time delay	5 min	After the current limiting being activated, BMS re-check the current to judge whether to maintain current limiting.

### 5.1.10 Charging over current parameters

Charging current limiting parameters				
Functions	Status	Item	Default	Configurable Range
Over current warning (charging)	ON	Over current warning	200A	Charging over current warning recovery - charging over current protection
		Over current warning recovery	195A	0A - charging over current warning
Over current protection (charging)	ON	Over current protection	210A	0A~150A
		Over current protection time delay	10S	Configurable
		Over current protection recovery conditions	BMS detects any output discharge current. After 60 seconds, the protection recovers automatically.	
Effective charging current	Charging current (in)		1000mA	
	Charging current (out)		700mA	

### 5.1.11 Discharging over current parameters

Discharging over current parameters				
Functions	Status	Item	Default	Configurable Range
Over current warning	ON	Over current warning	-205A	Over current protection - over current warning recovery
		Over current warning recovery	-203A	Over current warning -0A
Over current protection	ON	Over current protection	-210A	Transient over current protection - 0A
		Over current protection time delay	10S	Configurable
		Over current protection recovery conditions	1. BMS detects any inputcharge current. 2. After 60 seconds, the protection recovers automatically.	

### 5.1.12 Transient over current parameters

Transient over current parameters				
Functions	Status	Item	Default	Configurable Range
Over current protection (Transient)	ON	Over current protection	-300A	Discharge over current protection - 300A
		Over current protection time delay	30mS	Configurable
		Over current protection recovery	BMS detects any input charge current. After 60 seconds, the protection recovers automatically.	
	OFF	Over current lock	1. Continuously over current for 2 times. 2. The over current lock times exceeded.	
		Over current lock times	5 times	
		Over current lock release	Connected with charger	

### 5.1.13 Short circuit parameters

Short circuit parameters				
Functions	Status	Item	Default	Configurable Range
Short circuit protection	ON	Short circuit protection current value and time delay	1. Programmed into the software (can not be edited) 2. Cannot be turned off	
		Short circuit protection recovery	BMS detects any input charge current. After 60 seconds, the protection recovers automatically.	
	ON	Short circuit protection lock	1. Continuously short in the output circuit. 2. The over current protection lock times exceeded.	
		Short circuit protection lock times	5 times	
		Short circuit protection lock release	Connected with charger	
	Effective discharging current	Discharge current (in)		-1000mA
Discharge current (out)		-700mA		

## 5.1.14 Cell balance parameters

Short circuit parameters					
Functions	Status	Item	Default	Configurable Range	
Cell balance	ON	Standby balance	When there is no charging and discharging current flow, the standby equalization will be activated.		
		Standby time	10 hours	configurable	
	ON	Charging equalization	When at the charging or float charging status, the charging equalization will be activated.		
	Balance conditions	Activate voltage	3350mV	Configurable	
		Activate voltage difference	30mV		
		End voltage	20mV		
	ON	Temperature	According to the temperature range of no equalization (ambient temperature)		
		No equalization high temperature	50°C	Configurable	
		No equalization low temperature	0°C		
Cell failure	ON	Voltage difference	500mV	Configurable	
		Voltage difference recovery	300mV		

## 5.1.15 Cell balance parameters

Capacity parameters				
Capacity	Nominal capacity		200AH	5-300Ah
	Remaining capacity	Calculated accordingly to the cell voltage		Configurable
	Cycle life accumulated capacity	80%	Cycle life (configurable)	
	ON	Remaining capacity warning	15%	
	ON	Remaining capacity protection	5%	Output current flow will be cut off.

## 5.1.15 Other parameters

Pre-charging	2000ms	0-5000ms	The pre-charging function will be activated once the BMS powered on.	
BMS power consumption	ON	Longest standby time	48 hours (Do not connected with charger, and no effective charging current.)	
Heating	ON	Start heating temperature	0°C	Configurable
		Stop heating temperature	10°C	
		Heating function activation	When connected with charger, and the cell temperature reaches the setting value, the heating function activated. Heating function disabled when at standby and discharge status.	
External switch	OFF	When at the standby status, the BMS can be powered on/off through external switches.		
LCD screen	ON	Monitoring software to check the cell voltage, temperature and current.		
Charging activating	ON	1 minutes	The BMS powered off after under voltage protection. Press the button for recovering from protection status and activate output current.	Configurable
Compensating impedance	Compensation 1	0m Ω	9	Configurable
	Compensation 2	0m Ω	13	



## 5.2 Working mode

### 5.2.1 Charging mode

When a charger was detected, and the charger voltage is 0.5V+ more than the battery voltage, BMS will turn on the charging MOSFET. And when the charging current reaches the effective charging current value, BMS enters charging mode. At charging mode, charging and discharging MOSFET are both turned on.

### 5.2.2 Discharging mode

When a loads was detected, and the discharging current reaches the effective charging current value, BMS enters discharging mode.

### 5.2.3 Standby mode

When the BMS not in charging mode, nor discharging mode, it enters standby mode.

### 5.2.4 Power off mode

When the battery standby for 48 hours, and the battery is in under voltage protection status, or to press the reset/external switches, then the BMS will enter power off mode.

BMS activation conditions:

- 1.Charging to activate
- 2.Activate with 48V voltage
- 3.Press the power switches

### 5.3 LED indicator

#### 5.3.1 LED lights

One running indicator (Green)

One warning indicator (Red)

And four capacity indicator (Green)

●	●	●	●	●	●
SOC				ALARM	RUN

#### 5.3.2 Capacity indicators

Status	Charging				Discharging			
Capacity	L4 ●	L3 ●	L2 ●	L1 ●	L4 ●	L3 ●	L2 ●	L1 ●
0-25%	OFF	OFF	OFF	Blink	OFF	OFF	OFF	Green
25%-50%	OFF	OFF	Blink	Green	OFF	OFF	Green	Green
50%-75%	OFF	Blink	Green	Green	OFF	Green	Green	Green
≥75%	Blink	Green	Green	Green	Green	Green	Green	Green
Running	Green				Blink			

#### 5.3.3 Lights blinking explanation A

Blink Type	Lighten TIEM	OFF TIME
Blink A	0.25S	3.75S
Blink B	0.5S	0.5S
Blink C	0.5S	1.5S

### 5.3.4 Running status indicators

SYSTEM	RUNNING	RUN	ALM	SOC				REMARK
		●	●	●	●	●	●	
OFF	SLEEPING	OFF	OFF	OFF	OFF	OFF	OFF	OFF
STANDBY	RUNNING	Blink A	OFF	OFF	OFF	OFF	OFF	Standby
CHARGE	RUNNING	Green	OFF	According to the remaining capacity				LED Blink B
	Over current warning	Green	Blink B	According to the remaining capacity				LED Blink B
	Over voltage protection	Blink A	OFF	OFF	OFF	OFF	OFF	
	Temp. And over current protection	Blink A	Blink A	OFF	OFF	OFF	OFF	
DISCHARGE	RUNNING	Blink C	OFF	According to the remaining capacity				
	warning	Blink C	Blink C	capacity				
	Temp. Over current, short circuit protection	OFF	RED	OFF	OFF	OFF	OFF	
	Under voltage protection	OFF	OFF	OFF	OFF	OFF	OFF	No discharge

## 6. Function introduction

### 6.1 Standby

When the BMS is well-connected, and the battery is not in over/under voltage, over current, short circuit or high/low temperature protection status, press the reset button to activate the BMS. Then the LED

indicator lighten in order. And the BMS is in standby status.

At standby status, the running indicator blinks. And the battery pack can be charged and discharged.

## **6.2 over charging protection and recovery**

### **6.2.1 Cell over charging protection and recovery**

When an individual cell voltage exceeds the setting over charging protection threshold, BMS enters over charging protection status. And the battery can not be charged.

Conditions to release the over discharge protection status.

- 1. When the cell voltage decreases to individual cell over charging recovery threshold, and the SOC is lower than 96%.
- 2. When connected with loads.

### **6.2.2 Pack over charging protection and recovery**

Conditions to release the over discharge protection status.

- 1. When the cell voltage decreases to individual cell over charging recovery threshold, and the SOC is lower than 96%.
- 2. When connected with loads.

## **6.3 over discharging protection and recovery**

### **6.3.1 Cell over discharging protection and recovery**

Whenever an individual cell voltage lower than the over discharge protection threshold, BMS enters over discharge protection status. And the battery can not be charged. After maintaining communication with inverter for one minutes, the BMS will power off.

BMS can be activate by pressing reset button, or charging. And BMS will detects the voltage and check whether the voltage reaches the recovery

threshold.

### 6.3.2 Pack over discharging protection and recovery

When the pack total voltage decrease to the over discharging protection threshold, discharging MOSFET will be disconnected and battery pack can not be discharged. The BMS enters over discharge protection status. After maintain communication for one minutes, BMS will shut off automatically.

BMS can be activated by pressing 'reset' button or charging. After being activated, BMS detects the pack total voltage, and check whether the total voltage reach the recovery threshold.

### 6.4 Charging over current protection and recovery

If the charging limitation function is turned off, the charging over current protection will be activated once the charge current being too large.

When charging current value exceeds the setting over current threshold, and with enough the time delay, BMS enters charging over current protection. And the battery can not be charged.

Two ways to recover from charging over current protection.

- BMS will recover charging automatically after a certain time (default time). And detects the charging current value at the same time to check whether the current value reaches recovery threshold.
- Charging over current protection can be released by discharging.

### 6.5 Discharging over current protection and recovery

When the discharging current exceeds over current protection threshold, and with enough time delay, BMS enters discharging over current protection. And the battery can not be discharged.

BMS will recover discharging automatically after a certain time (default

time). And detects the discharging current value at the same time to check whether the current value reaches recovery threshold.

For discharging over current protection, there's transient current and discharge current. The recovery condition is the same. But when the transient over current protection times reaches the lock time threshold, only charging or restarting could release the protection.

## **6.6 Temperature protection and recovery**

There are six temperature sensing leads to detects and monitors the temperature in real-time.

### **6.6.1 High temperature protection and recovery**

When at the discharging status, any cell temperature (There are four NTC for cell temperature detecting.) exceeds the high temperature protection threshold, BMS enters high temperature protection status. And the battery can not be charged or discharged.

When detecting the cell temperature decreased to high temperature recovery threshold, BMS recovers charging/discharging functions.

### **6.6.2 Low temperature protection and recovery**

When at the charging status, any cell temperature decreased to the low temperature protection threshold, BMS enters low temperature protection status. And the battery can not be charged or discharged. When detecting the cell temperature exceeds the low temperature recovery threshold, BMS recovers charging/discharging functions.

### **6.6.3 Ambient temperature and MOSFET temperature**

When detecting the ambient temperature exceeds ambient temperature warning threshold, BMS enters high temperature warning status.

When detecting the MOSFET temperature exceeds the MOSFET temperature protection threshold, BMS enters Mosfet high temperature protection status.

## 6.7 Cell balance

BMS could balancing individual cell at standby and charging mode through power consumption circuit. When any individual cell voltage is higher than equalization start voltage and the voltage difference exceeds the threshold, the equalization circuit flows. The equalization start voltage threshold is configurable.

When connected with charger or the voltage difference lower than setting threshold, equalization stops.


## 6.8 Power on/off

Item	Function	Definition
1	Power on/Start	BMS can be activated by pressing reset button at sleeping mode. The LED indicators will be lightened one by one. Then the BMS enters running status.
2	Power off/Sleep	BMS will enter sleep mode if hold the reset button for 3 seconds at standby or discharging mode. The LED indicators will blink one by one. Then enters sleep mode.



## 6.9 Storage

BMS comes with data storage module, the data includes protection and warning status, protection and warning recovery time, individual cell voltage, pack cell total voltage, charging/discharging capacity, current and temperature. BMS could record the information of a certain period of time through upper computer system. No less than 300 pieces of information can be stored. And all the data can be saved into your computer as excel files.

## 7. Size and dimension

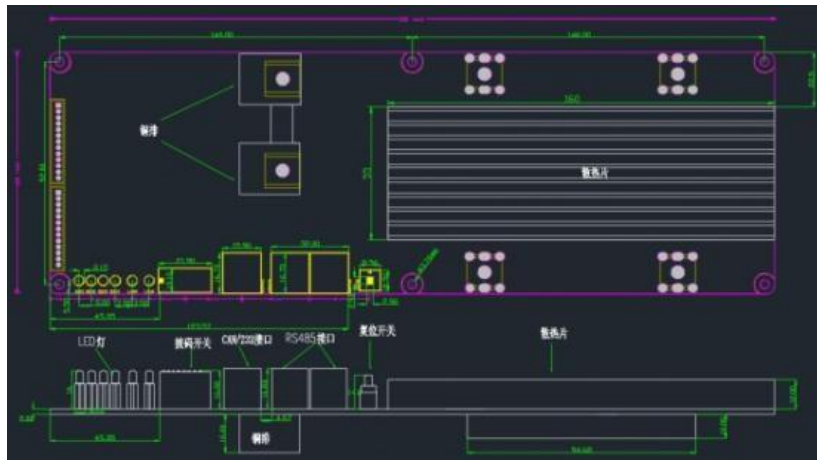

## 8. Appearance

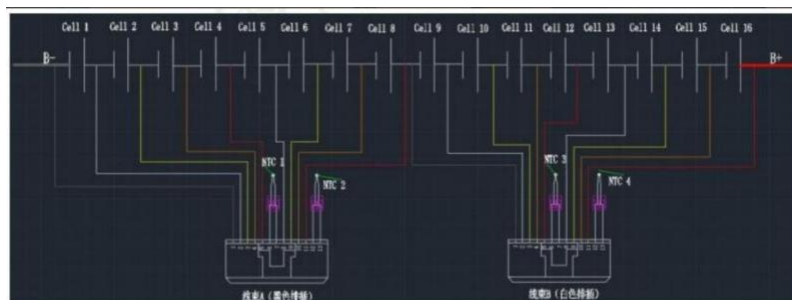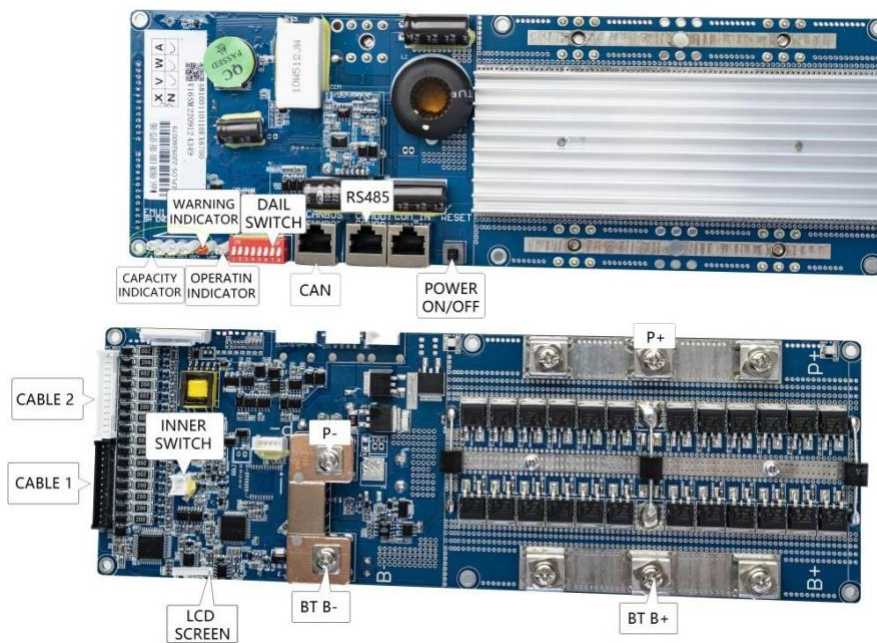



### 8.1 Wire introduction

Wire Harness A (Black connector)			
	CELL1-	The negative terminals of 1 <sup>st</sup> cell	
	CELL1+	The positive terminals of 1 <sup>st</sup> cell	
	CELL2+	The positive terminals of 2 <sup>nd</sup> cell	
	CELL3+	The positive terminals of 3 <sup>rd</sup> cell	
	CELL4+	The positive terminals of 4 <sup>th</sup> cell	
	NTC1+	The temperature sensor NTC1	
	NTC1-	The temperature sensor NTC1	
	CELL5+	The positive terminals of 5 <sup>th</sup> cell	
	CELL6+	The positive terminals of 6 <sup>th</sup> cell	
	CELL7+	The positive terminals of 7 <sup>th</sup> cell	
	CELL8+	The positive terminals of 8 <sup>th</sup> cell	
	NTC2+	The temperature sensor NTC2	
	NTC2-	The temperature sensor NTC2	
	Wire Harness B (White connector)		
		CELL9-	The negative terminals of 9 <sup>th</sup> cell
		CELL9+	The positive terminals of 9 <sup>th</sup> cell
CELL10+		The positive terminals of 10 <sup>th</sup> cell	
CELL11+		The positive terminals of 11 <sup>th</sup> cell	
CELL12+		The positive terminals of 12 <sup>th</sup> cell	
NTC3+		The temperature sensor NTC3	
NTC3-		The temperature sensor NTC3	
CELL13+		The positive terminals of 13 <sup>th</sup> cell	
CELL14+		The positive terminals of 14 <sup>th</sup> cell	
CELL15+		The positive terminals of 15 <sup>th</sup> cell	
CELL16+		The positive terminals of 16 <sup>th</sup> cell	
NTC4+		The temperature sensor NTC3	
NTC4-		The temperature sensor NTC3	

## 8.2 Wiring

Connection: B- → WIRE HARNESS A → WIRE HARNESS B → B+ → P+ → charger/loads → P- (After wiring, press the reset button to activate the BMS.)

Disconnection: unconnected charger or loads, turn off the BMS and disconnect WIRE HARNESS B → WIRE HARNESS A → B-

Input and output:

Charging: Connect the positive of charger with BMS P+, and the negative of the charger with BMS P-.


Discharging: Connect the positive of loads with BMS P+, and the negative of the loads with BMS P-.

## 9. Communication introduction

### 9.1 CAN and RM485

BMS transmit information through CAN interface. Buad rate 500KBITS/S. CAN interface applies 8P8C connectors. And CAN connector communicates with inverter or CAN TEST. RS485 collect the information. Then CAN transmit the battery pack information to PCS.

CAN connector definition:

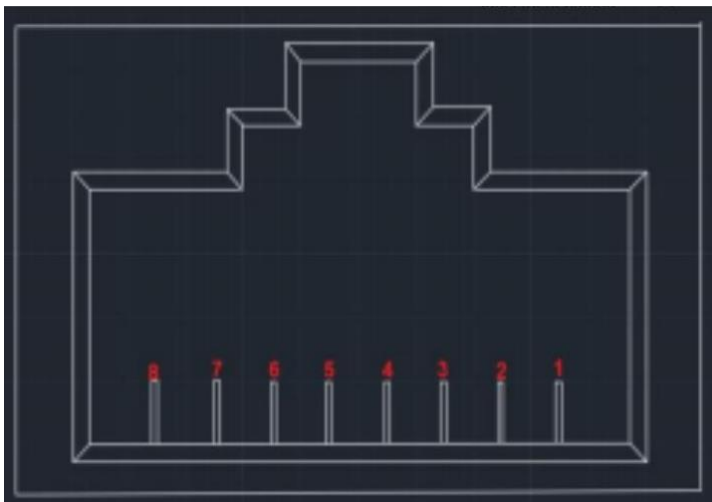


PINS	DEFINITION
1/8	RS485-B
2/7	RS485-A
4	CAN-H
5	CAN-L
3/6	GROUND

### 9.2 RS485

BMS could collect battery pack information through RS485 communication.

Baud rate: 19200bps. RS485 interface applies 8p8c connectors.

RS485 connectors definition:

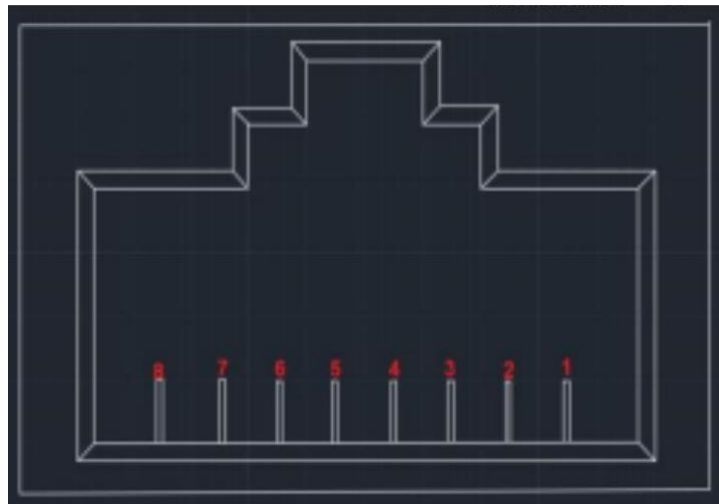


PINS	DEFINITION
1/8	RS485-B
2/7	RS485-A
3/6	GROUND
4/5	Internal communication (NC)

### 9.3 Parallel

When connected in parallel with RS485 connectors. CAN connectors act as upper communication interface. End devices could get the collected battery information through CAN interface.

RS485 connector connection:

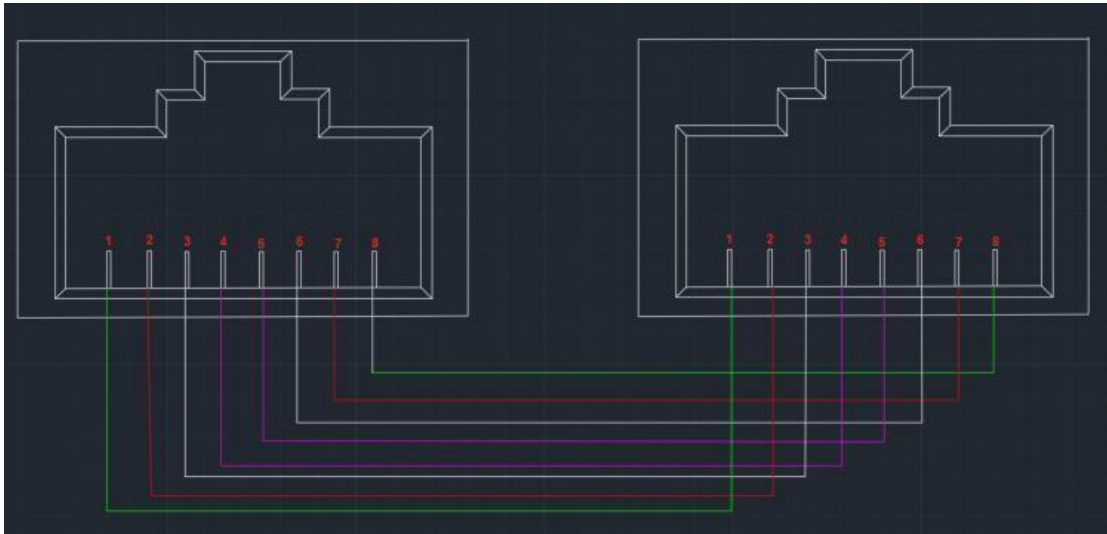


### 9.4 DIP switch



DIP ADDRESS: If the battery packs is connected in parallel, the DIP address identifies each pack with different addresses.

Bit 1 to 4 for different address of paralleled packs. Bit 5 to 8 for the quantity of slave packs. Check Appendix for details.

### 9.5 Auto-identification

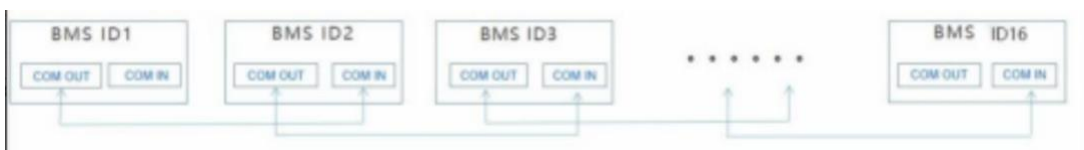

## 10. LCD screen

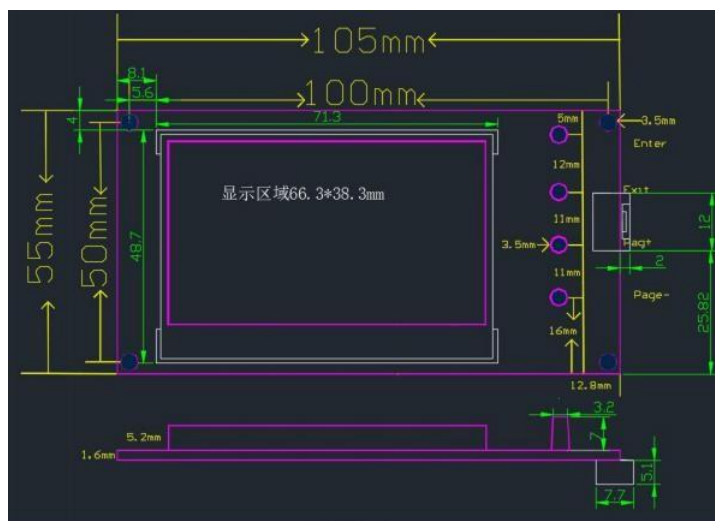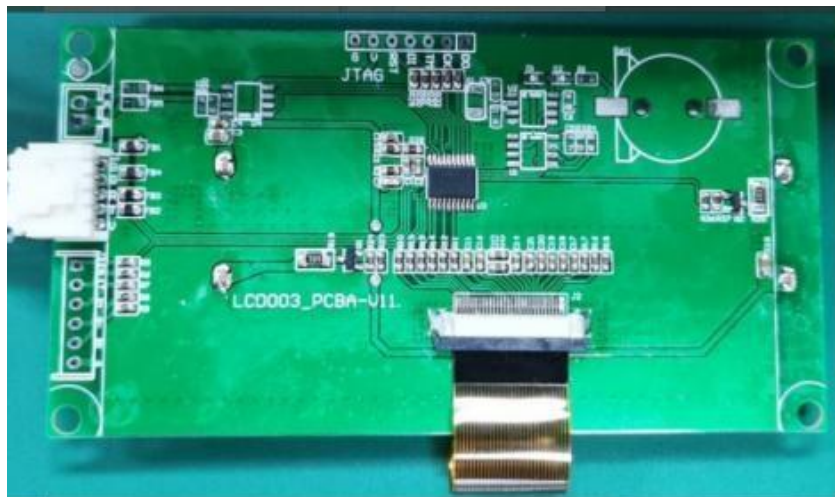

## 11. Safety precautions

- The BMS can not be connected in series.
- The components of the BMS withstand voltage of 100V most.
- Do not connect the external switch with other devices without permission. Or SEPLOS will not responsible for any damage that cause.
- Do not make any contact with the surface of battery cell when installing. Or the cell may be damaged.
- Do not make any contact with the components of the PCB. Or the PCB may be damaged.
- Operating at dry and dust free room.
- Check if the BMS is correctly connected if no voltage input and output after instillation.
- Follow the guidance and use of conditions specified in the data sheet.
- All right reserved.



# SEPLoS

*FOR BETTER LIFE*

©2022 SEPLoS Technology

Room 301, Building 6, No. 179 Kangyi Road, Qingxi Town, Dongguan, Guangdong, China

TEL : (86) 15079804024

E-mail: [info@seplos.com](mailto:info@seplos.com)

Site: [www.seplos.com](http://www.seplos.com)